

VICTORIAN SHADING



Internal Shading Instruction Manual




Made in the United Kingdom

Please read all instructions before proceeding

Internal Shading Installation

To install the internal shading blinds to your Alton Victorian greenhouse you will need to temporarily remove the spandrel brackets. With the brackets removed you will be able to position the roller blind parallel to the underside of the ridge. Fix this in place with round head screws.

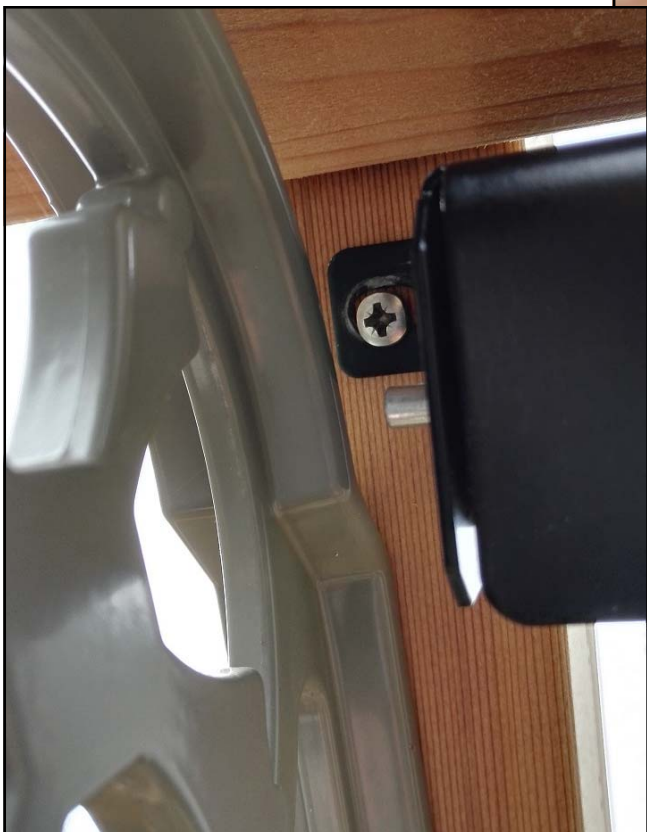

Where a roller blind meets a gable end you will need to adjust the direction of the flange. Using an adjustable spanner clamp this onto the flange with the fixing hole in and bend it upwards. You will now be able to fix this inline with the other blinds.

With all the blinds in place you can re-attach the spandrels. You will see they slot neatly over the fixing brackets of the blinds.


Internal Shading Installation



You will find that the universal hooks supplied with the roller blinds will not fit in a satisfactory position at the bottom of the roof bar because of the eaves spandrel. This isn't actually a problem as the ends of the roller blind fit neatly into the hole created behind the spandrel.

Here you can see the blind hooked in place behind the eaves spandrel. If you want to make use of the hooks supplied you can fix them higher up the roof bar giving you an extra position.



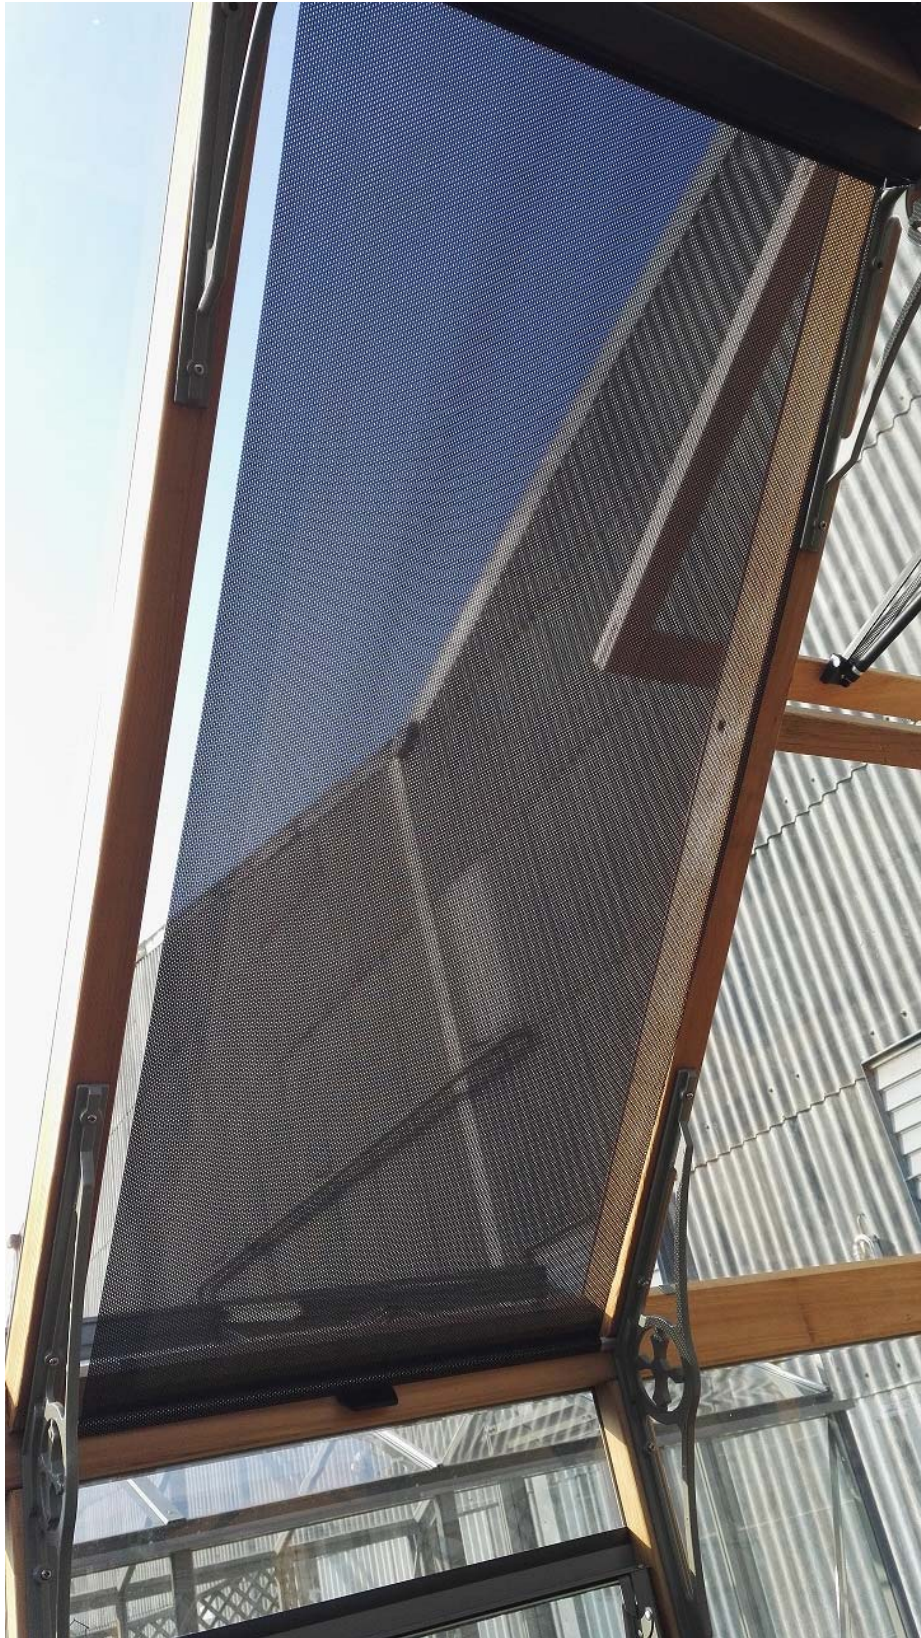

Alton Greenhouses, TGP Ltd, Blythe Park, Cresswell, Stoke-on-Trent, ST11 9RD

Telephone: 01782 385 409 www.Altongreenhouses.co.uk sales@altongreenhouses.co.uk